 



Quick Installation Guide

L2/L3 Superic Industrial Switch

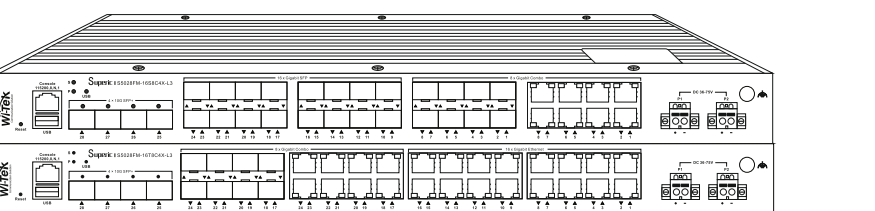

S5028FM-16T8C4X-L3 | S5028FM-16S8C4X-L3

 
1.Packing Content



Switch x 1



 
Quick Installation Guide x 1



Phoenix Terminal x 2



 
Power Cord x 1



Mounting Accessory x 1

S5028FM-16T8C4X-L3

 • Front Panel



Reset
USB
Console
4*10G SFP+ Slots
LED Indicators
8*1000Mbps Combo SFP Ports
16*1000Mbps Ethernet RJ-45 Ports
DC 36-75V IN

• Back Panel




AC 100-240V Power IN

• LED indicator and button

LED Indicator&Button	Description
P	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
USB	On: USB flash drive is detected by device Off: USB flash drive not insert or not detected by device
Copper ports indicators	Green on: Port connected Blinking: data on TX/RX Off: Port disconnected
Copper speed indicators	Yellow on:The port is connected with 1000Mbps speed Off: The port is connected with 10/100Mbps speed
Fiber Indicators	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting

S5028FM-16S8C4X-L3

 • Front Panel



Reset
USB
Console
4*10G SFP+ Slots
LED Indicators
16*1000Mbps SFP Ports
8*1000Mbps Combo SFP Ports
DC 36-75V IN

• Back Panel




AC 100-240V Power IN



• LED indicator and button

LED Indicator&Button	Description
P	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
USB	On: USB flash drive is detected by device Off: USB flash drive not insert or not detected by device
Copper ports indicators	Green on: Port connected Blinking: data on TX/RX Off: Port disconnected
Copper speed indicators	Yellow on:The port is connected with 1000Mbps speed Off: The port is connected with 10/100Mbps speed
Fiber Indicators	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting

 Desktop Installation

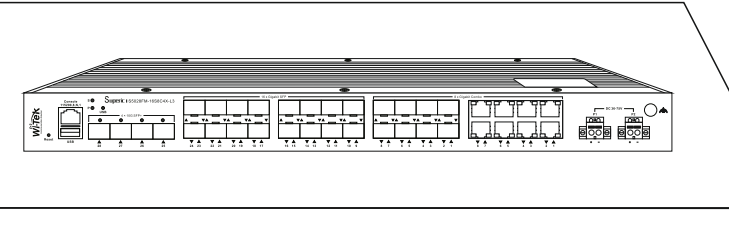

Rack-Mount Installation

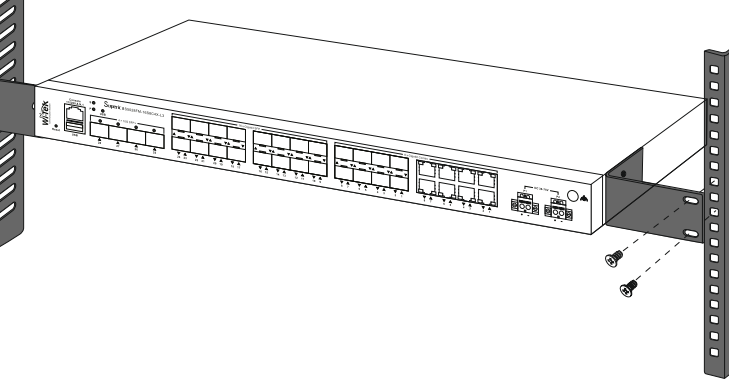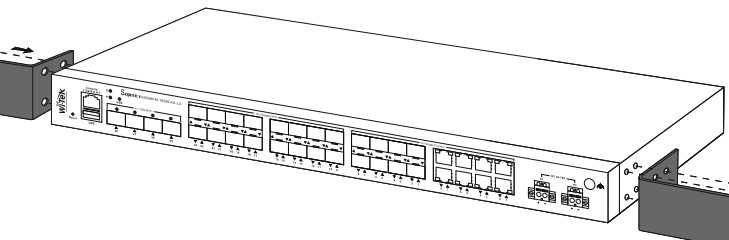  


4.Management

• Log in to the switch locally


To log in, follow these steps:

 1. Launch your web browser. you type the default IP 192.168.0.1 in the address bar
2. The login screen will appear. The default username and password are both admin

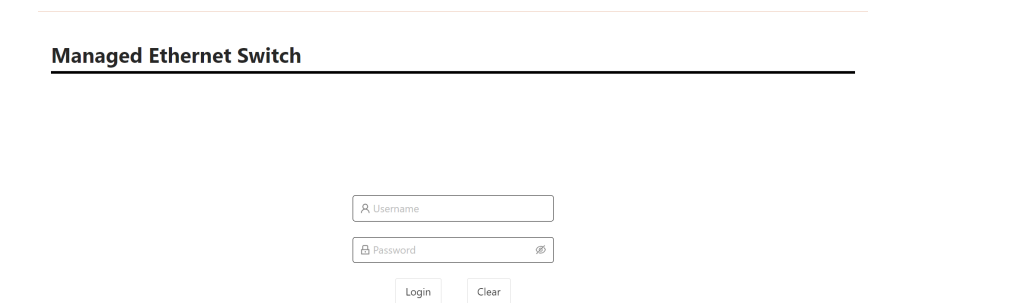

• Use the console cable to access the switch

 Connection Diagram:

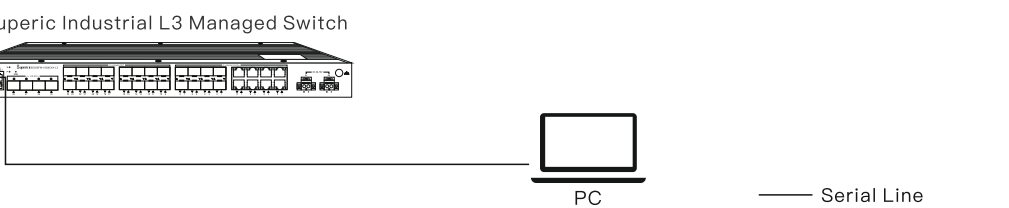

Step 1 Download a PuTTY software

 
 
Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure

Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).

Notice:


Step 2 is your computer recognizes the COM number of the Console line

Step 3 is the baud rate of the switch (the baud rate of the switch is 115200)

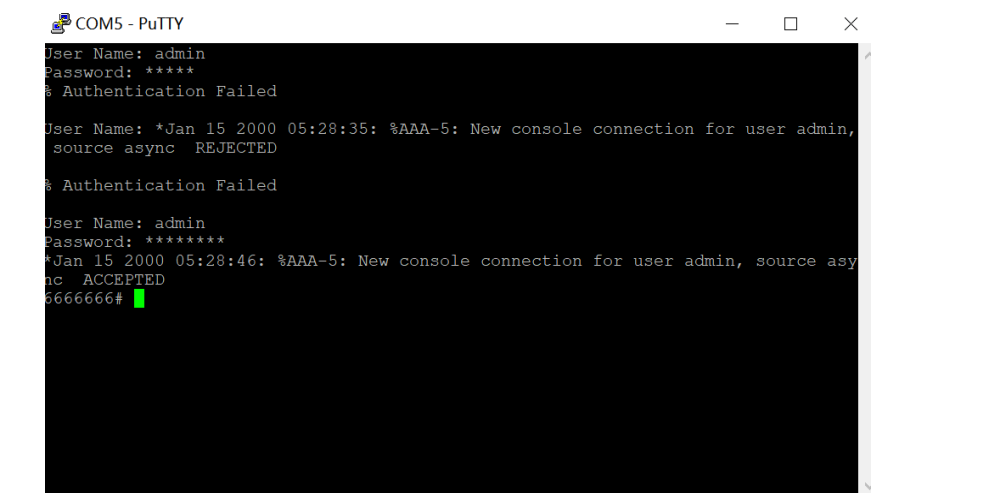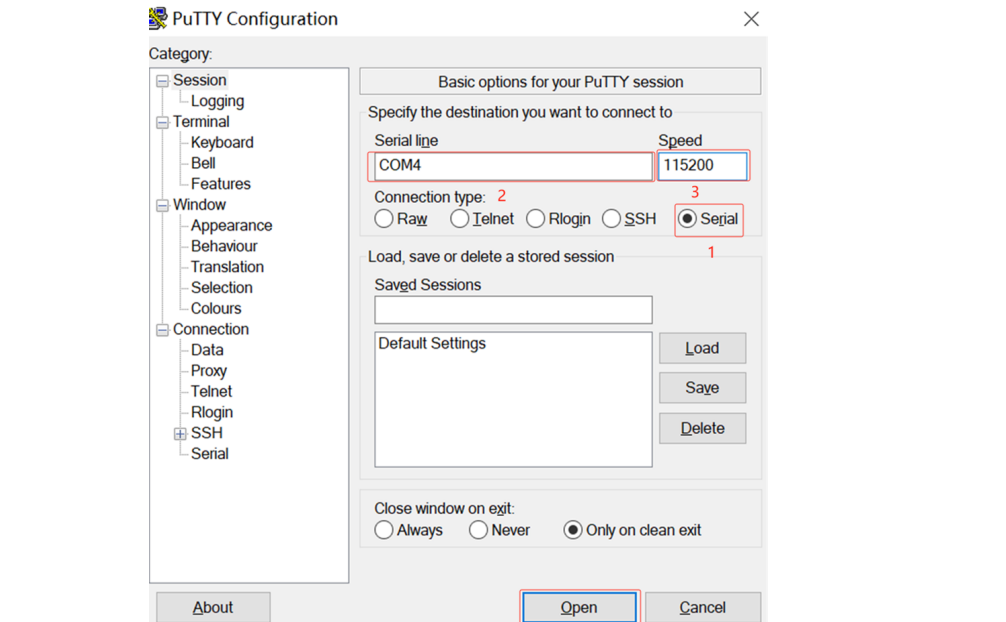

• Use Telnet to log in to the CLI mode of the switch

 
Connection Diagram:

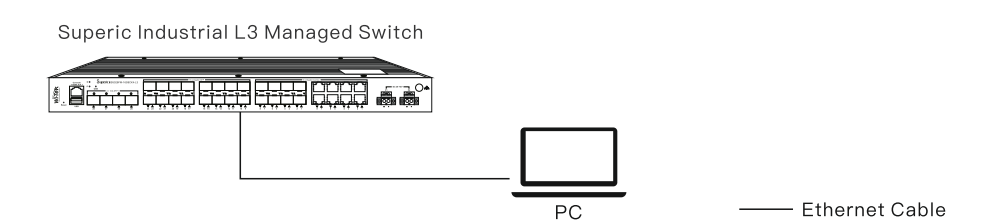

Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch

Step 2 Open the cmd window of the computer

 Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)

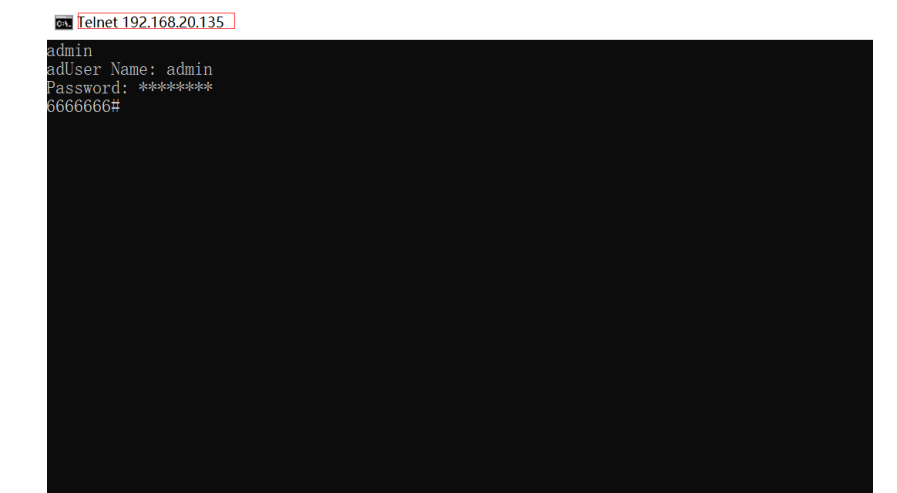

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812,
Huaqiang Era Plaza, Tangwei Community,
Fuhai Street, Bao'an District, Shenzhen City,
Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

