


Quick Installation Guide

 
PoE Cloud Gateway

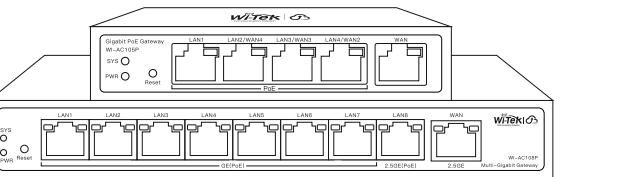

WI-AC105P Hardware Version: V2
WI-AC108P Hardware Version: V2

www.wireless-tek.com

1.Packing Content



PoE Cloud Gateway x1



Power Adapter*1

 


Quick Installation Guide*1

2. Appearance Overview

For WI-AC105P

• Front Panel



LED Indicator

Reset Button

1 * 10/100/1000Mbps PoE+ RJ45 LAN Port

3 * 10/100/1000Mbps PoE+ RJ45 LAN/WAN Ports

1 * 10/100/1000Mbps RJ45 WAN Port

• Rear Panel



DC 54V Input Port

• Port and Button


Item	Description
LAN	10/100/1000BASE-T Ethernet RJ45 PoE+ Port with auto negotiation, which is connected to the switch, access point or PCs
WAN	10/100/1000BASE-T Ethernet RJ45 Port with auto negotiation, which is connected to the DSL/Cable Modem
LAN/WAN Switchable	10/100/1000BASE-T Ethernet RJ45 PoE+ Port with auto negotiation. The port is switchable between the WAN port and the LAN port.
Reset	Press for more than 5 seconds to restore the gateway to factory.

• LED Indicator

Item	Status	Description
PWR	On	The device is powered on
	Off	The device is powered off
SYS	On	The device is working normally
	Blinking	The device is restoring factory default settings
WAN/LAN Link/ACT	On	The port is connected
	Blinking	Data being transferred

For WI-AC108P

 • Front Panel



LED Indicator

 
Reset Button

7*10/100/1000Mbps PoE+ RJ45 LAN Ports

1*2.5Gbps PoE+ RJ45 LAN Port

1*2.5Gbps RJ45 WAN Port

• Rear Panel



DC 54V Input Port

Grounding

• Port and Button


Item	Description
1GE LAN	10/100/1000BASE-T Ethernet RJ45 PoE+ Port, which is connected to the switch, access point or PCs
2.5GE LAN	2.5Gbps Ethernet RJ45 PoE+ Port, which is connected to the switch, access point or PCs
2.5GE WAN	2.5Gbps Ethernet RJ45 Port with auto negotiation, which is connected to the DSL/Cable Modem
Reset	Press for more than 8 seconds to restore the gateway to factory.

• LED Indicator






Item	Status	Description
PWR	On	The device is powered on
	Off	The device is powered off
SYS	On	The device is working normally
	Blinking	The device is restoring factory default settings
2.5GE LAN PoE(Orange)	On	The port is supplying power normally
	Off	No PoE Output
1GE LAN Link(Green)	On	The port is connected
	Blinking	Data being transferred
2.5GE LAN PoE(Orange)	On	The port is supplying power normally
	Off	No PoE Output
2.5GE LAN Link(Green)	On	The port is connected
	Blinking	Data being transferred
2.5GE LAN Link(Green)	On	The port is operating at 2.5Gbps
	Blinking	The port is operating at 1000Mbps
2.5GE WAN Link	On	The port is operating at 1000Mbps
	Blinking	Data being transferred

3.Configuration

 First, power on the device and make sure the WAN port of the AC gateway is connected to the Internet. And then connect the PC to the LAN port of the AC gateway and make sure PC and AC Gateway are in the same subnet.



     Step1: Launch a web browser and type 192.168.10.1 in the address bar, then press Enter (Windows) or Return (Mac).









4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

      Step 3 log in to the cloud account with the account password after registration.








4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

     Step 3 log in to the cloud account with the account password after registration.






4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

   Step 3 log in to the cloud account with the account password after registration.







4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

    Step 3 log in to the cloud account with the account password after registration.









4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

      Step 3 log in to the cloud account with the account password after registration.





4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

  Step 3 log in to the cloud account with the account password after registration.







4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

    Step 3 log in to the cloud account with the account password after registration.






4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

   Step 3 log in to the cloud account with the account password after registration.






4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

   Step 3 log in to the cloud account with the account password after registration.







4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

    Step 3 log in to the cloud account with the account password after registration.






4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

   Step 3 log in to the cloud account with the account password after registration.







4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

    Step 3 log in to the cloud account with the account password after registration.




4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

 Step 3 log in to the cloud account with the account password after registration.



4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.

Step 2 Register an account password by user name or email.

Step 3 log in to the cloud account with the account password after registration.

