




Quick Installation Guide

Cloud-Managed Wireless In-Wall Access Point

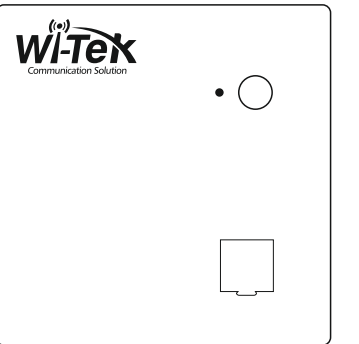


WI-AP416

www.wireless-tek.com

1.Packing Content

- WI-AP416

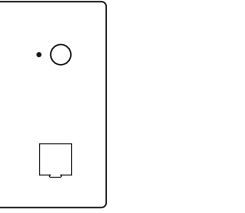

AP x 1




Screws x 1




Quick Installation Guide x 1

2.Appearance Overview

- WI-AP416

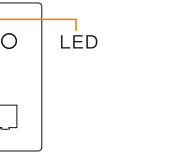


Front Panel

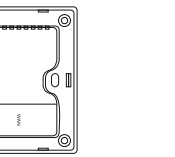

Rear Panel

 - Port and Button



Reset Button

LAN Port



WAN/PoE Port

- LED indicator


LED Indicators	Status	Status
System Indicator	Blinking	The system is starting.
		The system is restoring factory.
LAN Indicator	Solid on	The system is working normally.
	Off	Power off/Working abnormally

- Port and Button


Port&Button	Description
RESET	Reset button, which is used to restore the factory. Holding down the reset button for 8 seconds to revert to factory settings.
WAN/PoE	10/100Mbps Base-T Ethernet Port, which supports 802.3af PoE Input. It is generally connected to the upstream switch.
LAN	10/100Mbps Base-T Ethernet port. It is generally connected to wired LAN devices such as PC.

3.Network Topology

- Bypass mode topology

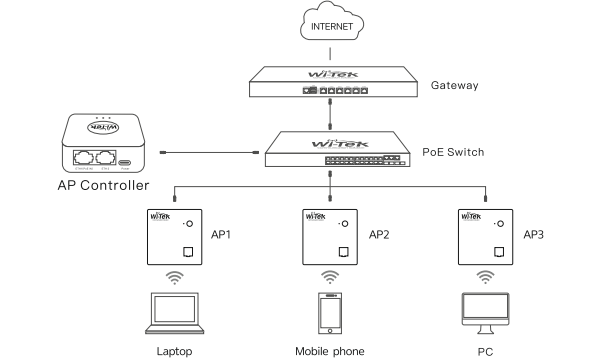


- AC Gateway mode topology

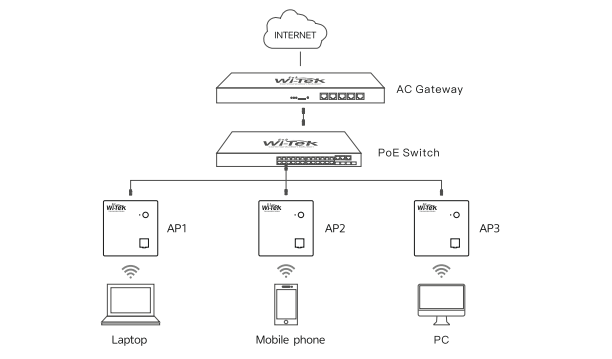


4.Device Installation

1

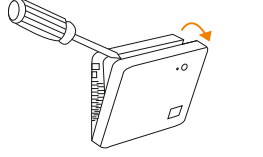


1. Detach the faceplate of the AP with a screwdriver.

2

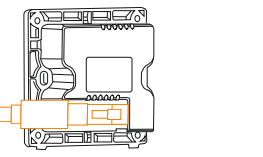


2. Connect the Ethernet cable inside the junction box to an RJ45 plug.

3

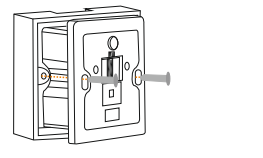

3. Insert the enclosed screws and tighten them with a screwdriver to secure the mounting bracket.

4

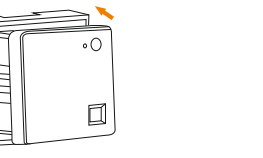


4. Press the faceplate of the AP back into position.

5.Power Supply


- Power via PSE Device

The APs can be powered via PoE switch which supports 802.3af PoE

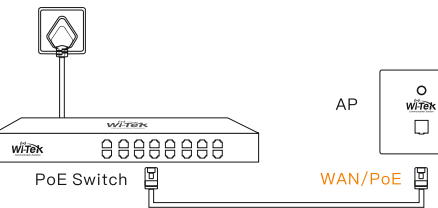


- Power via Power adapter

The APs can be powered via power adapter which supports 12V DC output.

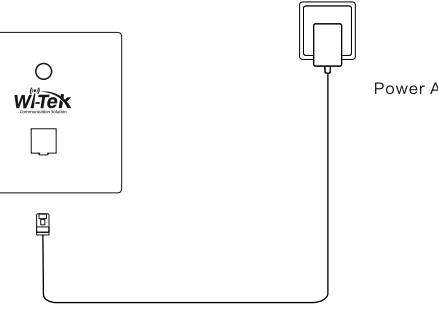


6.Configuration Method


- Method 1. Connect computer to the wireless signal of AP, the default SSID is "WI-TEK xxxx". Password is 88888888

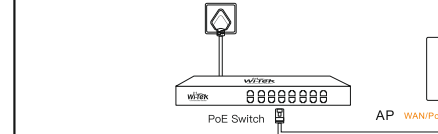

Method 2. Connect computer to the AP by Ethernet cable.

 


- Step 1. On the computer, please set the static IP under the same subnet with AP, 192.168.1.xx

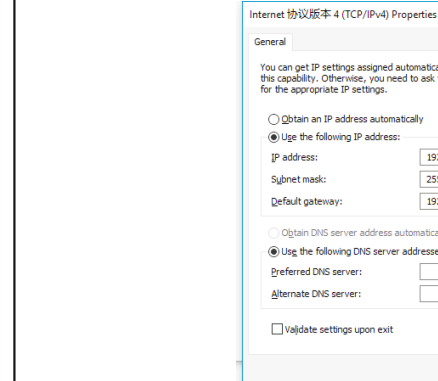

7.Cloud Management

- *Note: Please ensure the device is connected to the Internet before binding the device to cloud.

1. Go into the APP UI and click "+" on the right bottom of the screen. Then fill in the information to finish creating the project.

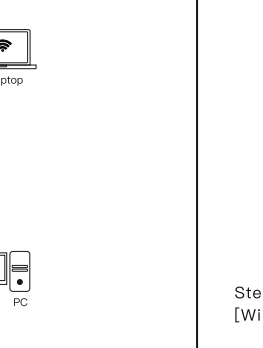

Step3. After get in the management page, On the left side menu, please go to [Wireless] to setup the access point.




- Fit AP Mode default Login IP:192.168.1.88




8.Warranty Card

- 3. When you find the device on the cloud topology, it means the device is successfully bound to the cloud.

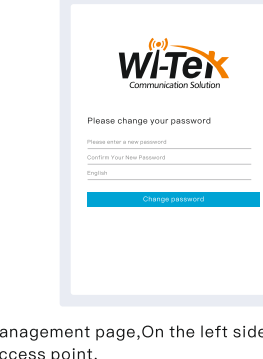

4. Click "Wi-Fi Configuration", you can make the basic wireless settings on the router.

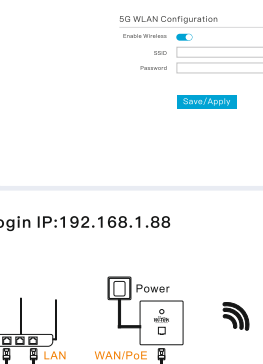

- If the product defects within the warranty period, we will provide professional maintenance service.

• Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.

- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

Company Website

Cloud Management

Technical Support

Wireless-Tek Technology Limited

Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community,

Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.

Website: www.wireless-tek.com

Tel: 86-0755-32811290

Email: sales@wireless-tek.com

Technical Support: tech@wireless-tek.com

CE

FC

RoHS