




Quick Installation Guide


Cloud L2+ Managed Fiber Switch

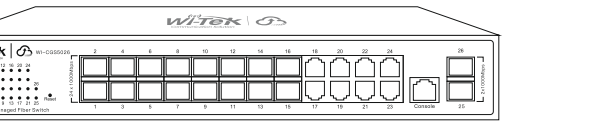

WI-CGS5026(V2)

www.wireless-tek.com


1. Packing Content

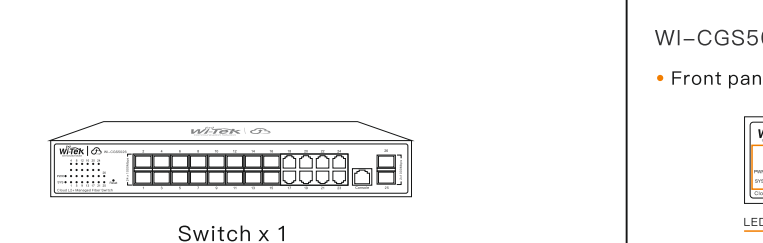

Switch x 1



 
Quick Installation Guide x 1



Serial Line x 1



Power Cord x 1

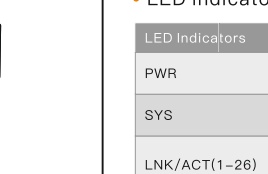


Mounting Accessories
(hook x 2, mats x 4, screw x 8)


2. Appearance Overview

WI-CGS5026(V2)

• Front panel

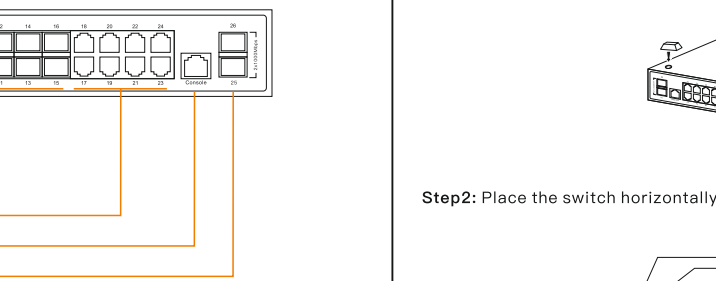

• Back panel

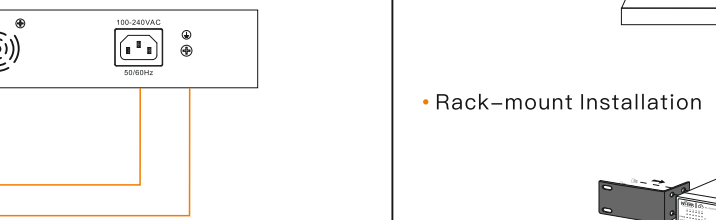


• LED indicator and button

LED Indicators	Description
PWR	On: The device power on is normal Off: The device is power off or failed
SYS	Blinking: The system is working normally On: The system is being started or abnormal
LNK/ACT(1-26)	On: Port connected Off: Port disconnected Blinking: Data transmission
Reset	Hold for >5 sec. to restore factory default


3. Installation

• Desktop Installation


Step1: Attach the mats to the bottom four corners of the switch.

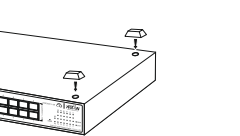

Step2: Place the switch horizontally on the desktop.

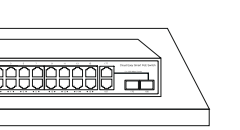


• Rack-mount Installation

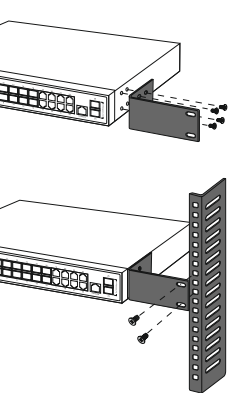

4. Configuration

First, the device is powered on, the Internet is connected to the WAN port of the Gateway, the other one LAN port of the Gateway is connected to the Switch, then the PC is connected to the switch. Ensure that the PC and the Gateway are in the same subnet.

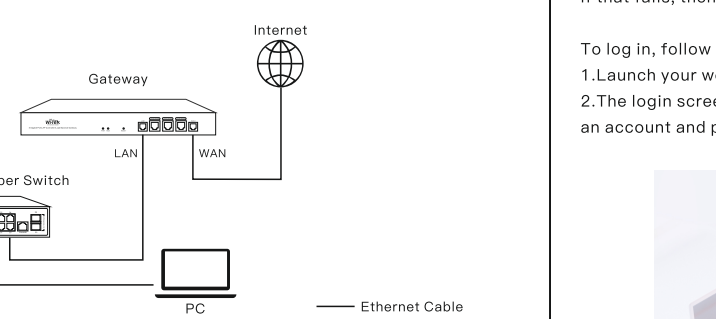


5. Management

• Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned.
The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1



To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.
2. The login screen will appear. In the factory state, the first login requires setting an account and password.

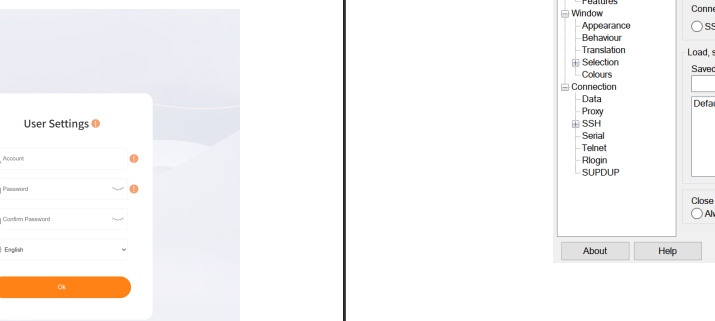

• Use the console cable to access the switch


Connection Diagram:

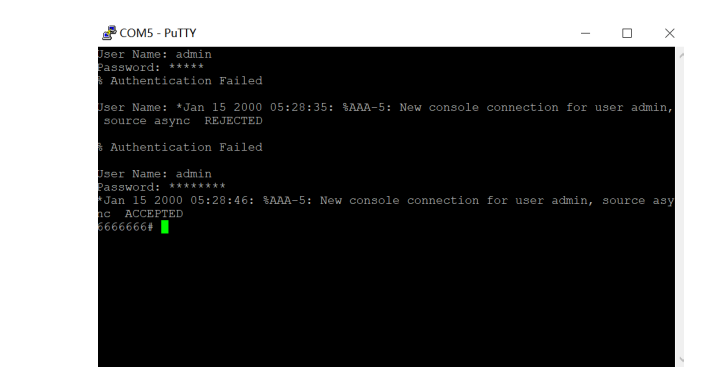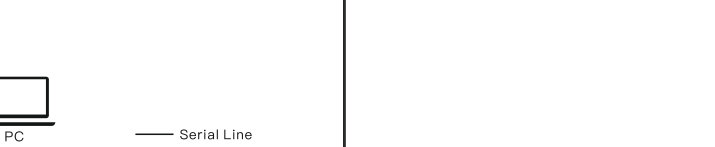

Note: The first login requires setting up an account and password.

• Use Telnnet to log in to the CLI mode of the switch

Connection Diagram:

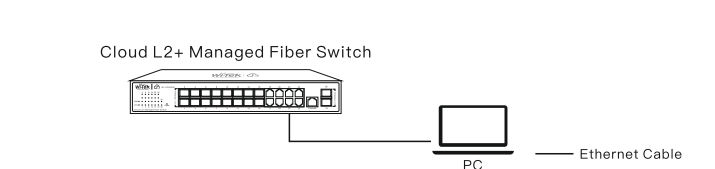



Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch
Step 2 Open the cmd window of the computer
Step 3 Enter Telnnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnnet 192.168.0.1)




Note: The first login requires setting up an account and password.

• Cloud login switch configuration

1. Log in to the cloud management page
(No account, you need to register an account to log in, The URL is <http://cloud2.wireless-tek.com>)


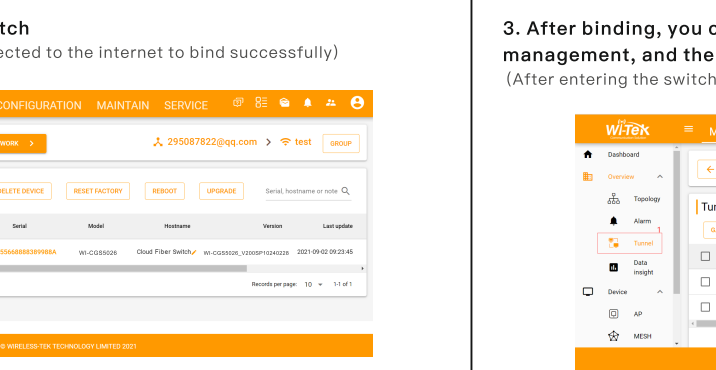
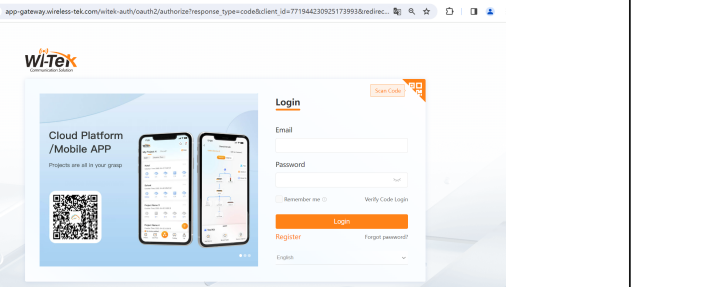


Please enter the device serial number and the last six hexes of the device MAC address to bind a device to the current group, device can be off when binding.
(Explain: The 17-digit SN code and MAC address of the switch are shown on the sticker on the back of the switch as shown in the figure below)

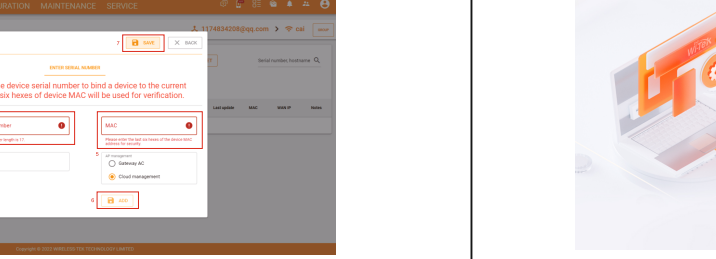

3. After binding, you can use the Switch in the Tunnel option in the cloud management, and then use EWEB to enter the switch.

(After entering the switch, you can configure it based on your own needs)

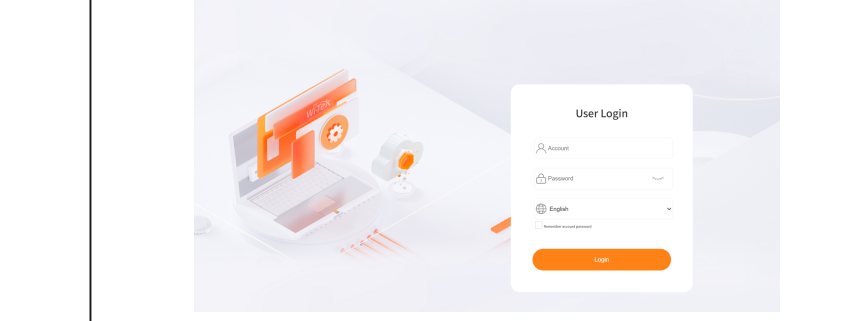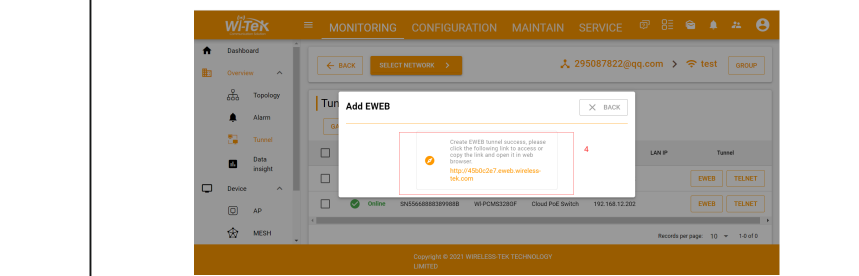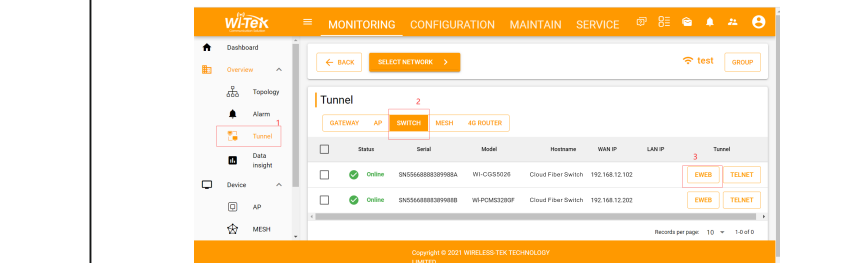

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812,
Huaqiang Era Plaza, Tangwei Community,
Fuhai Street, Bao'an District, Shenzhen City,
Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

