




Quick Installation Guide


Cloud L2+ Managed Switch

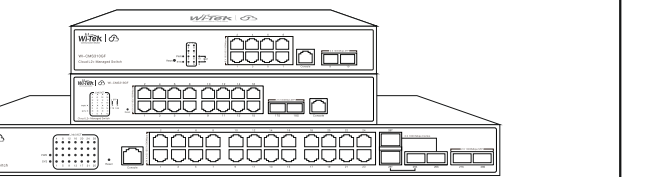

WI-CMS310GF | WI-CMS318GF | WI-CMS328GF

www.wireless-tek.com


1. Packing Content

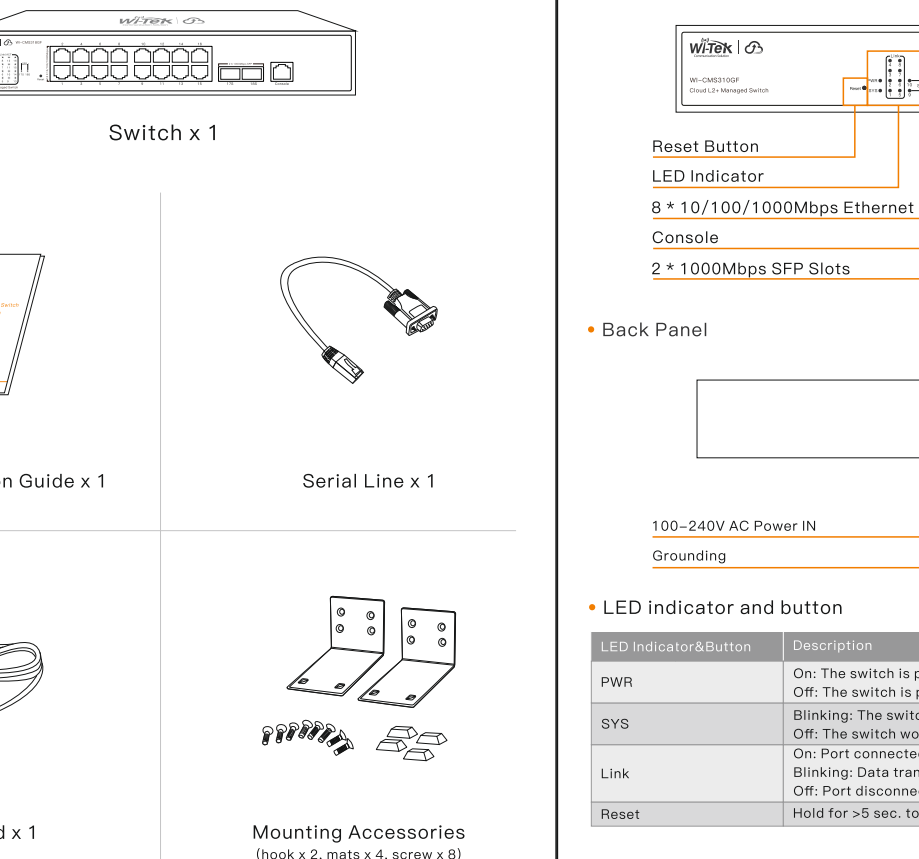


2. Appearance Overview

For WI-CMS310GF

• Front Panel

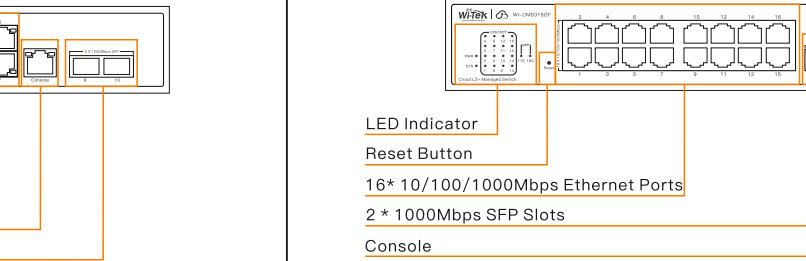

• Back Panel

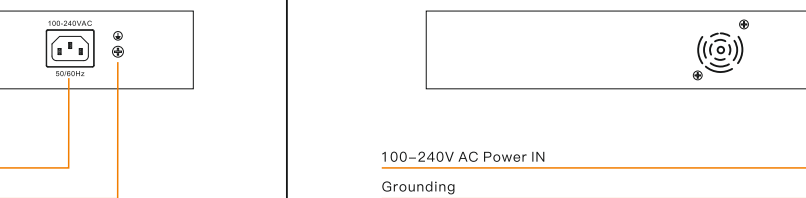


• LED indicator and button


LED Indicator&Button	Description
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
SYS	Blinking: The switch works properly Off: The switch works improperly
Link	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

For WI-CMS318GF

• Front Panel

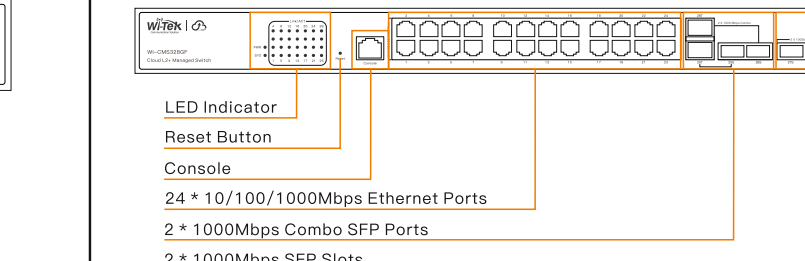

• Back Panel

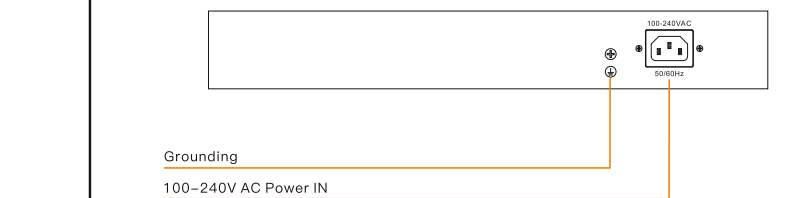


• LED indicator and button


LED Indicator&Button	Description
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
SYS	Blinking: The switch works properly Off: The switch works improperly
Link/ACT	Orange on: The port is connected with 10/100Mbps speed Green on: The port is connected with 1000Mbps speed Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

For WI-CMS328GF

• Front Panel

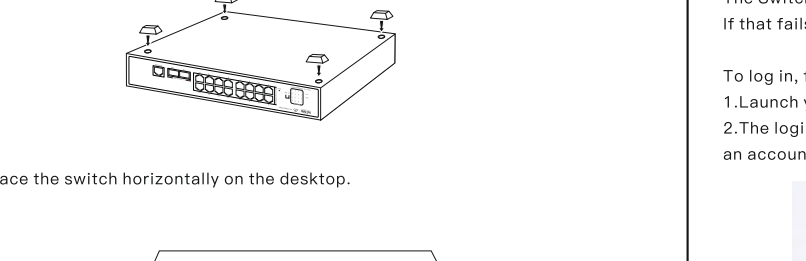

• Back Panel

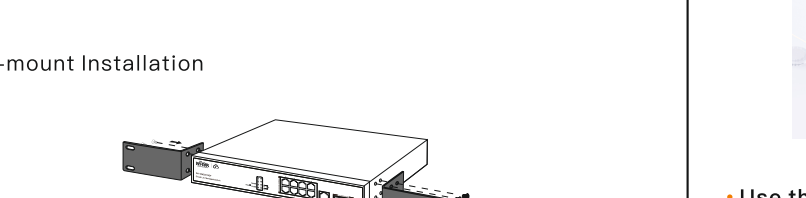


• LED indicator and button

LED Indicator&Button	Description
PWR	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
SYS	Blinking: The switch works properly Off: The switch works improperly
Link/ACT	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

3. Installation

• Desktop Installation



Step1: Attach the mats to the bottom four corners of the switch.

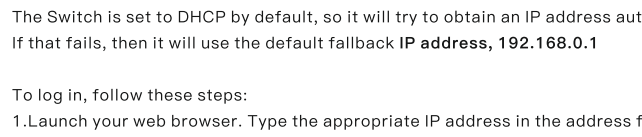

Step2: Place the switch horizontally on the desktop.



• Rack-mount Installation

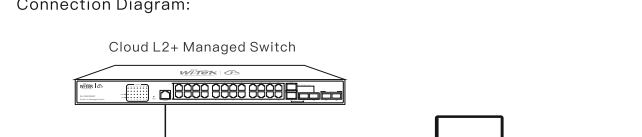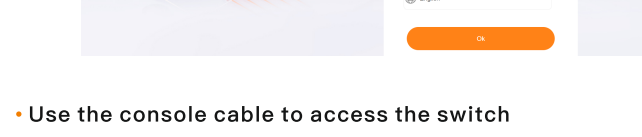

4. Management

• Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned.

The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.

2. The login screen will appear. In the factory state, the first login requires setting an account and password.

Step 1 Download a PuTTY software

Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure


Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).

Notice:

Step 2 is your computer recognizes the COM number of the Console line

Step 3 is the baud rate of the switch (the baud rate of the switch is 9600)

Connection Diagram:

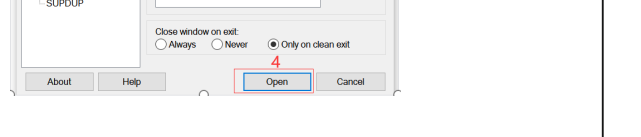

• Use the console cable to access the switch



Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch


Step 2 Open the cmd window of the computer

Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)

3. Installation

• Desktop Installation



Step1: Attach the mats to the bottom four corners of the switch.

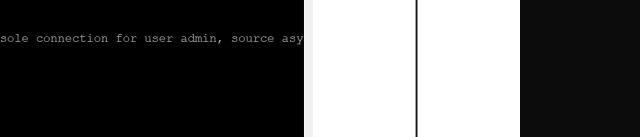

Step2: Place the switch horizontally on the desktop.



• Rack-mount Installation

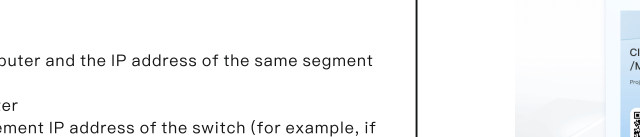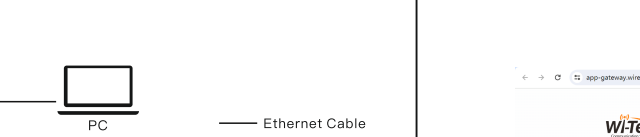

4. Management

• Log in to the switch locally

Let the Switch obtain an IP address and then check the DHCP server to see which IP address was assigned.

The Switch is set to DHCP by default, so it will try to obtain an IP address automatically. If that fails, then it will use the default fallback IP address, 192.168.0.1

To log in, follow these steps:

1. Launch your web browser. Type the appropriate IP address in the address field.

2. The login screen will appear. In the factory state, the first login requires setting an account and password.

Step 1 Download a PuTTY software

Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure

Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).

Notice:


Step 2 is your computer recognizes the COM number of the Console line

Step 3 is the baud rate of the switch (the baud rate of the switch is 9600)

Connection Diagram:



• Use the console cable to access the switch

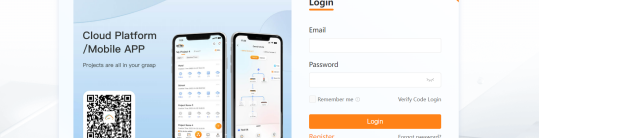

Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch

Step 2 Open the cmd window of the computer

Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)

2. Enter the cloud binding switch

(Explain: The switch must be connected to the internet to bind successfully)

Please enter the device serial number and the last six hexes of the device MAC address to bind a device to the current group, device can be off when binding.

(Explain: The 17-digit SN code and MAC address of the switch are shown on the sticker on the back of the switch as shown in the figure below)

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number

MAC

Verify Login

Register

Forgot password

English

Cloud L2+ Managed Switch

16-port Gigabit Ethernet RJ45 and 2-port Gigabit SFP SlotS

Model: WI-CMS318GF

Input Power: AC 100-240V 50/60 Hz 1.2A Max

Default Login IP: 192.168.0.1

S/N:

MAC:

Manufacturer: Wireless-Tek Technology Co., Ltd

The device must be earthed

Made in China

Cloud Platform / Mobile APP

Please enter the device serial number to bind a device to the current group. The last six hexes of device MAC will be used for verification

Device number