




Quick Installation Guide


Cloud Gigabit Gateway

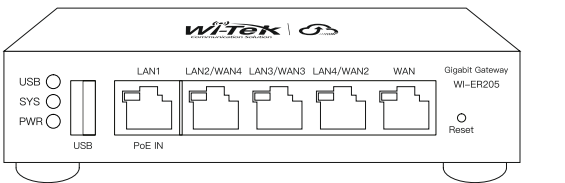


WI-ER205

www.wireless-tek.com


1.Packing Content

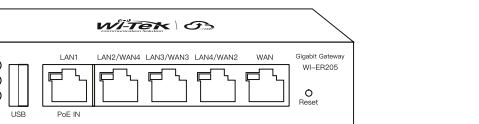


Cloud Gigabit Gateway x 1

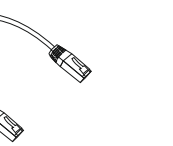

Ethernet Cable*1

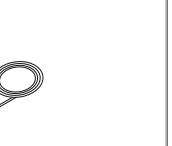

Power Adapter*1

 

Magnetic Accessory*4



Quick Installation Guide*1

2. Appearance Overview

For WI-ER205

• Front Panel



Indicator

USB

 
1* 10/100/1000Mbps RJ45 PoE+ IN LAN Port

3* 10/100/1000Mbps RJ45 LAN/WAN Ports

1* 10/100/1000Mbps RJ45 WAN Port

Reset Button

• Rear Panel



5V/3A Type C Input Port

• Interface and Button


Item	Description
LAN	10/100/1000BASE-T Ethernet RJ45 PoE+ IN Port with auto negotiation, which supports PoE Input
WAN	10/100/1000BASE-T Ethernet RJ45 Port with auto negotiation, which is connected to the DSL/Cable Modem
LAN/WAN Switchable	10/100/1000BASE-T Ethernet RJ45 with auto negotiation. The port is switchable between the WAN port and the LAN port.
Reset	Press for more than 8 seconds to restore the gateway to factory.

• LED Indicator


Item	Status	Description
PWR	On	The device is powered on
	Off	The device is powered off
SYS	On	The device is working normally
	Blinking	The device is restoring factory default settings
USB	On	The USB port is connected
	Off	The USB port is disconnected
Port	On	The port is connected
Indicator(Link)	Blinking	Data being transferred

3.Configuration


First, power on the device and make sure the WAN port of the AC gateway is connected to the Internet. And then connect the PC to the LAN port of the AC gateway and make sure PC and AC Gateway are in the same subnet.

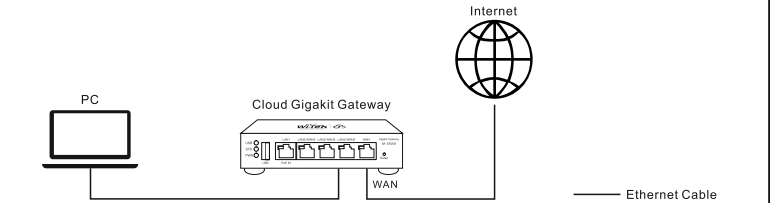


Step1: Launch a web browser and type 192.168.10.1 in the address bar, then press Enter (Windows) or Return (Mac).

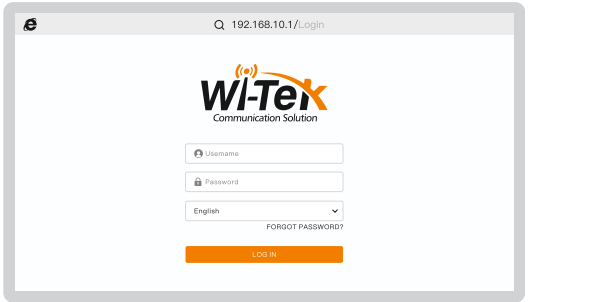

Step2: After entering the default login account password "admin", the system will prompt you to modify your user password to enhance security.

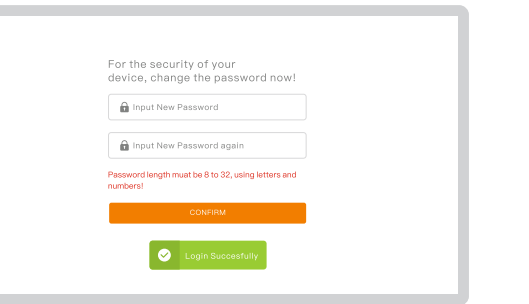

Step3: Go to the AP List tab and devices which have been discovered by the AC are displayed.Follow the following procedure to bind AP.

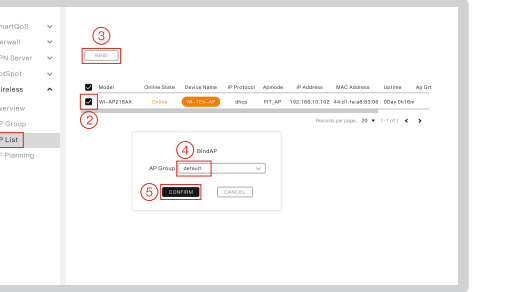


4.Cloud management settings

Note: The AC Gateway must be connected to the internet to bind successfully

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.


Step 2 Register an account password by user name or email.

Step 3 log in to the cloud account with the account password after registration.

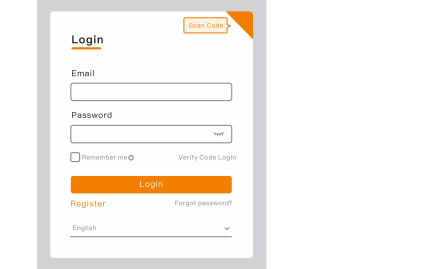


After the login is successful, the steps to bind the device on the cloud account are as follows:


(1) Click ADD NETWORK

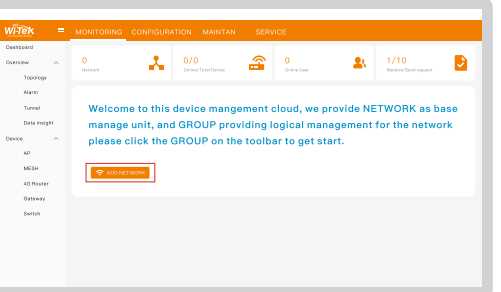

(2) Fill in the group name and location, click save.

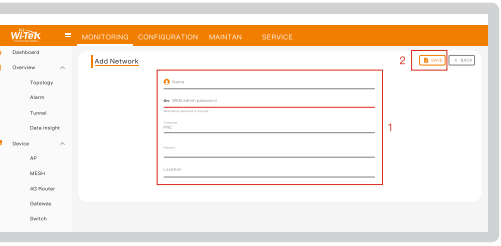


(3) And click next.

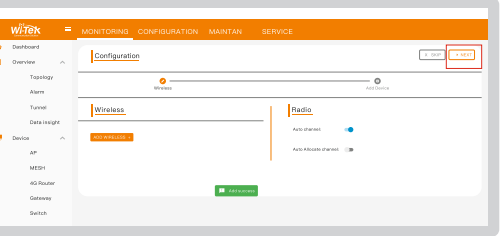


(4) Enter serial number and the last six hexes of MAC, click ADD to create and click SAVE, and the configuration is completed.



Note:The 17-digit SN code of the device is shown on the bottom of the device.

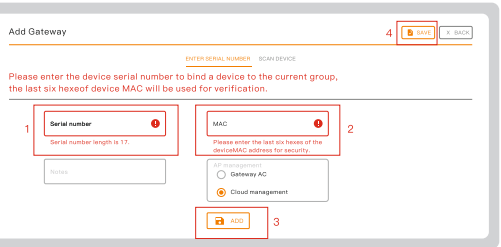

(5) In the relevant device options, you can see the bound device information.

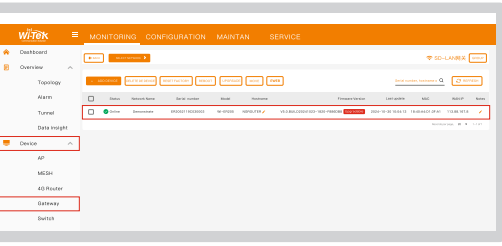

(6) Click Tunnel, Select binding device type, click EWEB to log in to the device.

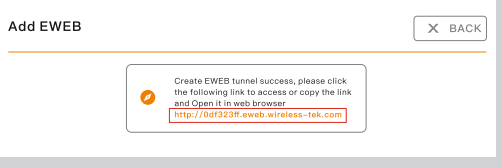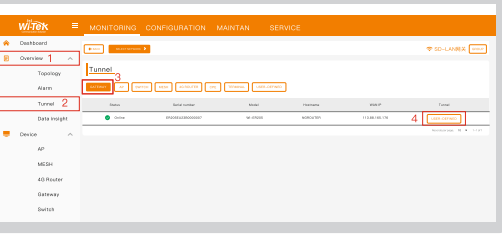

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited

Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.

Website: www.wireless-tek.com

Tel: 86-0755-32811290

Email: sales@wireless-tek.com

Technical Support: tech@wireless-tek.com

