


Quick Installation Guide

6GHz AX2400 Fixed Wireless Access

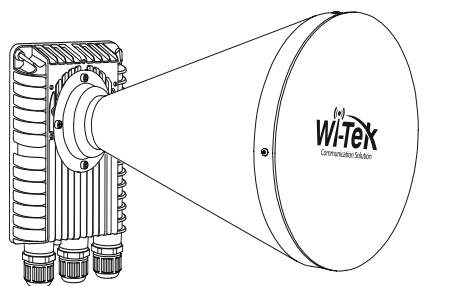

WI-FW5620-H

1. Packing Content




Horn Antenna x 1




Radio x 1




Power Cord x 1

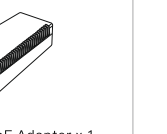

48V 2.5GE PoE Adapter x 1

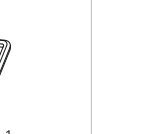

Hex Wrench x 1

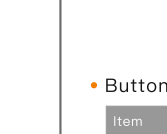

Metal Strap x 2



Waterproof Connector x 3



Screw x 4




Quick Installation Guide x 1

2. Appearance Overview


For WI-FW5620-H

• Back Panel

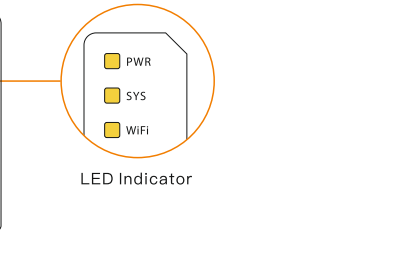

LED Indicator

• Side Panel

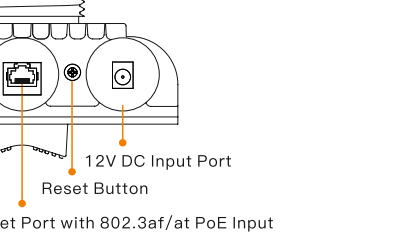

• Button Indicator


Item	Description
Reset Button	Press and hold the "Reset" button for more than five seconds to restore the device to its factory settings mode.

• LED Indicator


Item	Status	Description
PWR	On	The device is powered on
PWR	Off	The device is powered off
SYS	On	The system is working normally
SYS	Off	The system is not working
Wi-Fi	On	The Wireless function is enabled
Wi-Fi	Off	The Wireless function is disabled

3. Device Installation


• 1.First, put the waterproof trap on the radio. Then align the base of the antenna with the holes on the device, and secure the antenna to the device with screws.
Note: The waterproof trap is already installed in the radio by default.

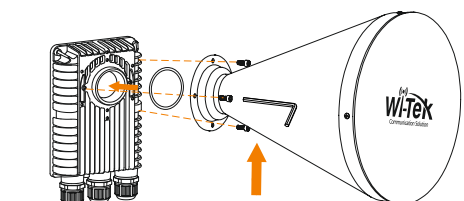

• 2.Using 2 Metal Straps, Secure the Radio to the mounting pole.

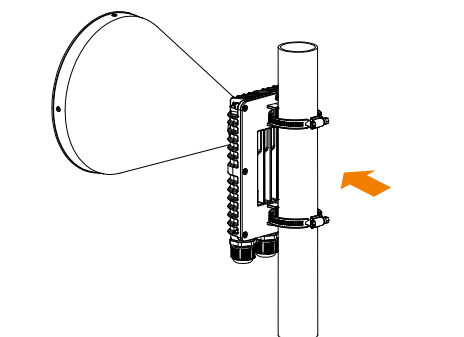

• 3.Attach ground wire (not included) to the integrated grounding screw.

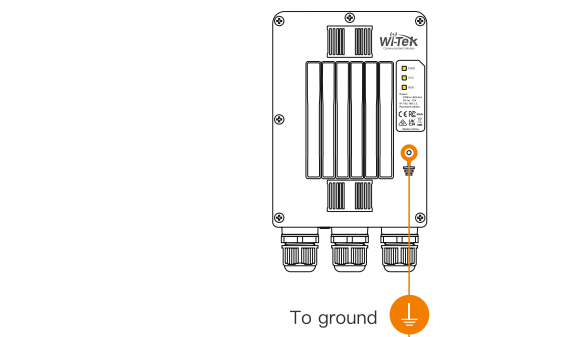


4. Application

• PTP



• PTMP

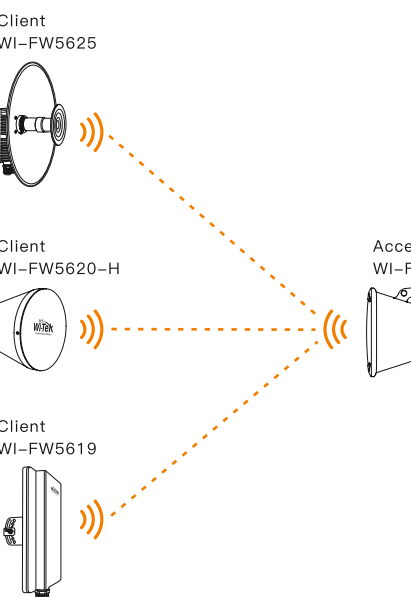


5. Web Management


• A) Boot Up Device

(1) Power on the device.

(2) Connect the PC to the PoE adapter using Ethernet cable

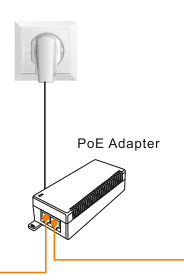


(3) Open a browser such as Chrome or Firefox and launch the login page with default IP 192.168.1.2, then type the password admin to enter the Management UI.

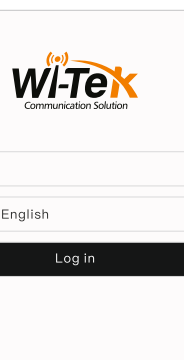


• B) Configure the Access Point

 (1) Please finish LAN Settings, and then click Next.



 
(2) Wireless Settings: Choose Access Point Mode and create a new SSID (Network name) for your wireless network. And then select Encryption Mode and create a PSK Key to protect the device.




• C) Configure the Client

(1) Repeat step A) to make sure the device is powered on

(2) Please finish LAN Settings and make sure the subnet is the same as the Access Point, and then click Next.

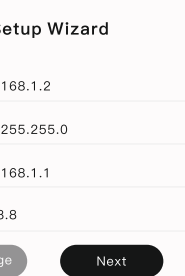

(3) Wireless Settings: Choose Client Mode and enter the same SSID and PSK Key and select the same Encryption Mode as Access Point.

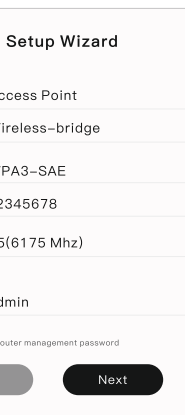

6. Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

• If the product defects within the warranty period, we will provide professional maintenance service.
• Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
• Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812,
Huaqiang Era Plaza, Tangwei Community,
Fuhai Street, Bao'an District, Shenzhen City,
Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

