


Quick Installation Guide

PoE Splitter

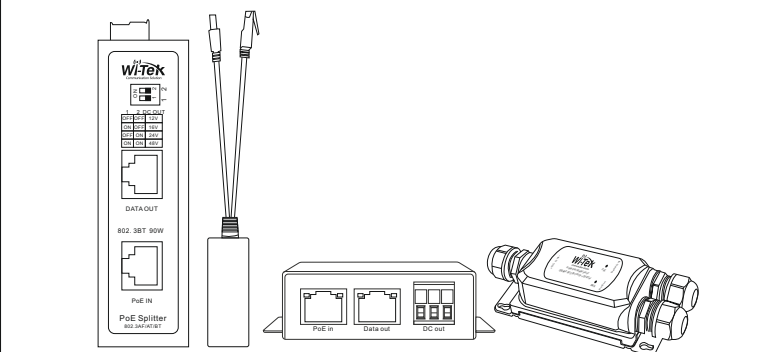


WI-POE11S-48V | WI-POE56S-BT-I-O |
WI-POE55S-BT-I-DC | WI-POE31S

www.wireless-tek.com

1. Package Contents

Take WI-POE55S-BT-I-DC as an example

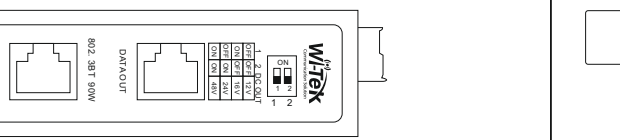

1 x Splitter



1 x Quick Installation Guide
(only for WI-POE56S-BT-I-O |
WI-POE55S-BT-I-DC | WI-POE31S)



1 x Wrench
(only for WI-POE56S-BT-I-O)



1 x Ground Wire
(only for WI-POE56S-BT-I-O)



2 x Screw Driver
(only for WI-POE55S-BT-I-DC)



 
1 x Wall-mounting Accessory
(only for WI-POE56S-BT-I-O)



3 x M22 Waterproof Gland
(only for WI-POE56S-BT-I-O)

2. Appearance Overview

WI-POE11S-48V



1 10Mbps/100Mbps PoE+ input port





• LED indicator

LED Indicators	Description
PoE	On: PoE power received successfully Off: No PoE power supply access Blinking: Abnormal PoE power reception or abnormal DC output
Data	On: Data connection is successful Blinking: Data transmission Off: No Device connected


• LED indicator

LED Indicators	Description
PoE	Blinking: Abnormal power reception On: The voltage of PoE output is normal Off: The voltage of PoE output is abnormal
PWR	On: 12V DC output is normal Off: No PoE output or the splitter is abnormal

WI-POE56S-BT-I-O

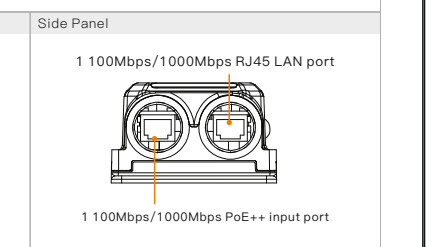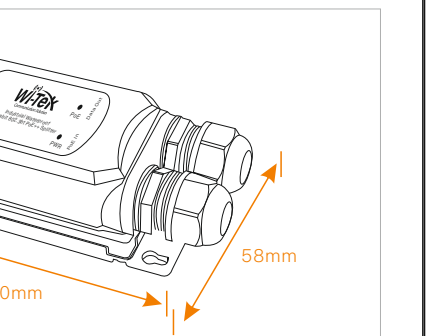

WI-POE55S-BT-I-DC

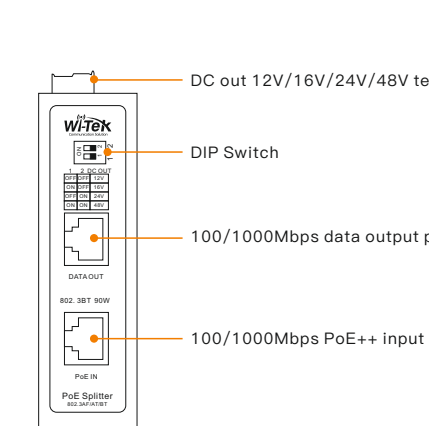


1	2	DC OUT
OFF	OFF	12V
ON	OFF	16V
OFF	ON	24V
ON	ON	48V

• LED indicator


LED Indicators	Description
PoE(Orange)	On: Power received successfully Blinking: Abnormal power reception or abnormal DC output Off: Not working
Data(Green)	On: Data connection is successful Blinking: Data transmission Off: No Device connected

• Application Diagram

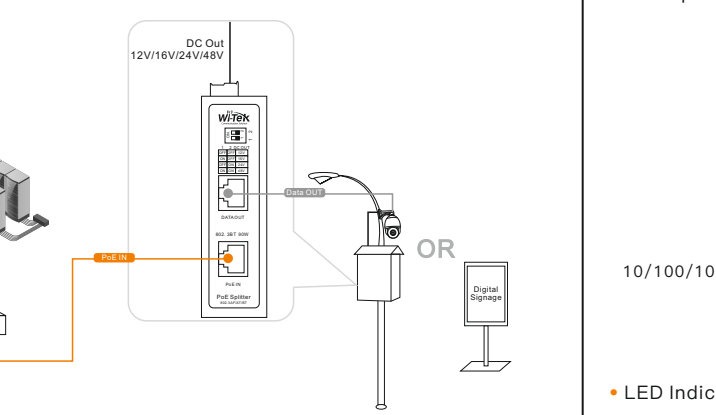

WI-POE31S


• Front panel

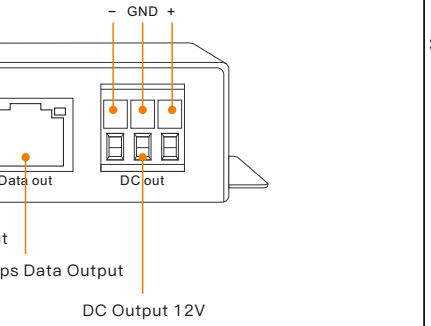

• LED Indicator light

LED	Color	Description
PoE	Orange	On: Power received successfully Blinking: Abnormal power reception or abnormal DC output Off: Not working
Data	Green	On: Data connection is successful Blinking: Data transmission Off: No Device connected


• Device Connection Diagram

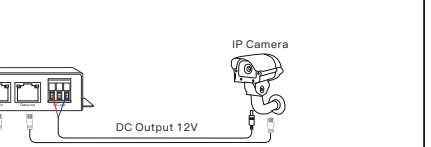


4. Accessories Installation

For WI-POE56S-BT-I-O


Step 1: Disassemble the waterproof gland

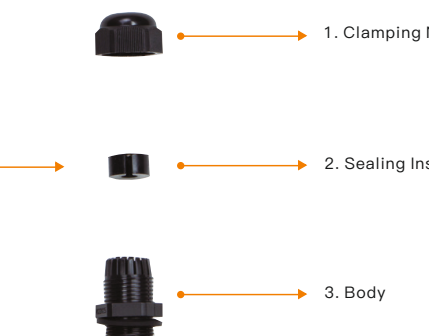

Step 2: Turn the body of waterproof gland to the RJ45 ports and tighten it by the wrench. Pick a cable and run through the sealing insert and clamping nut.

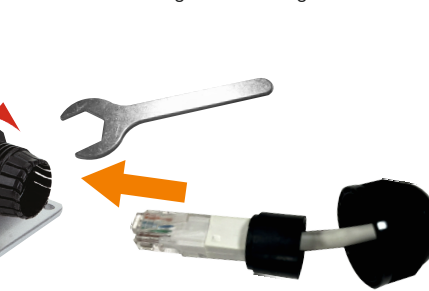


Step 3: Plug the cable into the port.

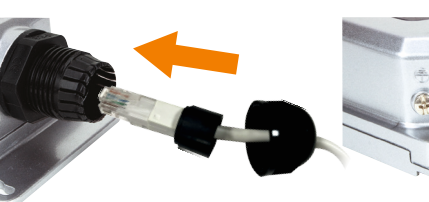

Step 4: Insert the sealing insert into the waterproof gland body.




Step 5: Attach the clamping nut to the waterproof gland to complete assembly.

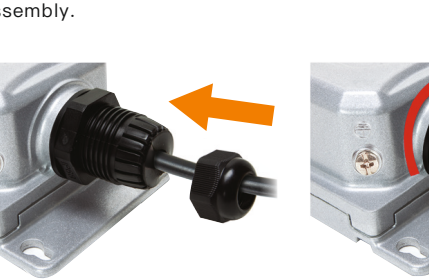

Step 6: Check it and make sure it is tightly installed.




Step 7: Repeat Step 1 to Step 6 for other ports.

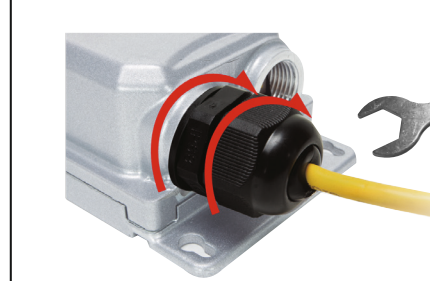

5. Installation

• Wall-mount Installation (Only for WI-POE56S-BT-I-O)

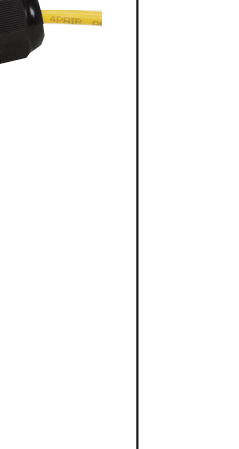

• Desktop Installation



Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

* If the product defects within the warranty period, we will provide professional maintenance service.
* Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
* Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812,
Huaqiang Era Plaza, Tangwei Community,
Fuhai Street, Bao'an District, Shenzhen City,
Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

