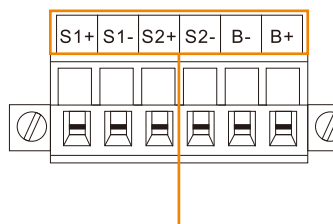
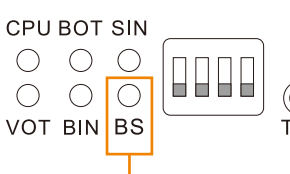
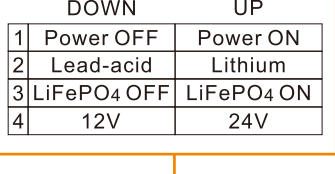
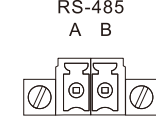
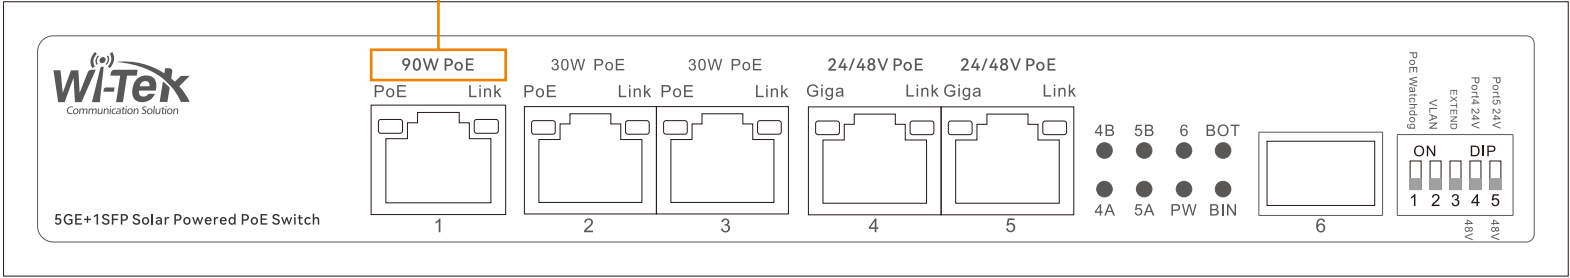
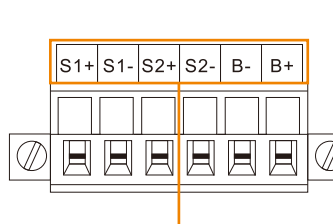
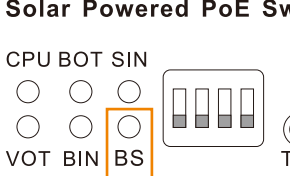
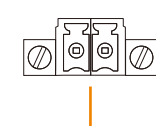
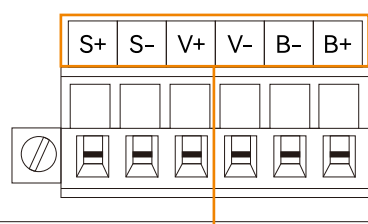
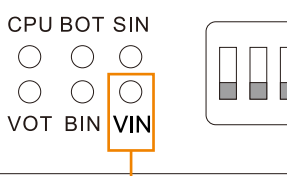


How to distinguish WI-PS306GF-UPS-15A versions

OptionA:Distinguish by appearance

Hardware Version	Software Version	Different	Describe
V2	V1.34	    Phoenix Connector Mark LED Indicators DIP Switch Mark RS-485 90W PoE for port 1 	1, NEW DIP switch mark for NEW software 2, There is RS-485 terminal. 3, There is no grounding terminal. 4, Phenix connector mark is “S1+, S1-, S2+, S2-, B-, B+”. 5, LED indicator is “BS”. 6, 90W PoE for port 1.
V2	V1.30	   Phoenix Connector Mark LED Indicators RS-485	1, There is RS-485 terminal. 2, There is no grounding terminal. 3, phenix connector mark is “S1+, S1-, S2+, S2-, B-, B+”. 4, LED indicator is “BS”.
V1	/	   Phoenix Connector Mark LED Indicator Grounding	1, There is grounding terminal. 2, Phenix connector mark is “S+, S-, V+, V-, B-, B+”. 3, LED indicator is “VIN”.

Option B: View the software version via WI-IOT100 on the cloud

Status

Solar System Address1

OnlineSolar System

0 WCharging Power

0 WDC Power

75 % @DischargingBattery

12 WLoad

-Discharging Duration Time

Battery Type12.8V (10.2 ~ 14.8V) LiFePO4 Battery

Battery Charging Current0.0 A

Battery Voltage13.45 V

Battery Discharging Current0.96 A

Battery Temperature-

Solar System VersionV1.30

WI-PS306GF-UPS-15A Version Update Log

WI-PS306GF-UPS-15A hardware version V2.0, software version V1.34

- 1, Update the operation modeand mark of DIP switches to make it easier to understand and use.
- 2, Updatethe 12.8V LiFePO4 battery maximum charging voltage from14.8V to14.6V, discharge cut-off voltage from 10.2V to10V, and 25.6V LiFePO4 battery maximum charging voltage from 29.6V to29.2V,discharge cut-off voltage from 20.4V to 20V, making it more compatible with more batteries.
- 3, Updatethe port 1 from 60W PoE to 90W PoE.

WI-PS306GF-UPS-15A hardware version V2.0, software version V1.30

- 1, Added a RS-485 interface for IoT devices to upload solar and battery data to the cloud and configure battery parameters and alarms.
- 2,Fixed the solar input Phoenix terminalmark from “S+, S-, V+, V-” to“S1+, S1-, S2+, S2-”.
- 3,Fixed the LED indicator mark from “VIN” to“BS”.
- 4, Remove the grounding terminal.

WI-PS306GF-UPS-15A hardware version V1.0

- 1, First version.