


Quick Installation Guide


Cloud L3 Managed 10G Fiber Switch



WI-CFS6012-L3

www.wireless-tek.com

1. Packing Content



Switch x 1




Quick Installation Guide x 1



Power Cord x 1



Serial Line x 1

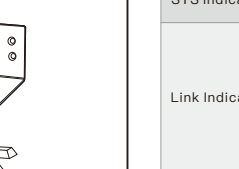


Mounting Accessories
(hook x 2, mats x 4, screw x 8)


2. Appearance Overview

WI-CFS6012-L3

• Front Panel

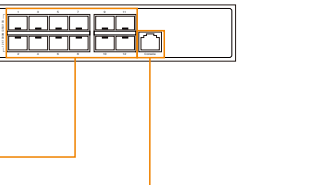

• Rear Panel

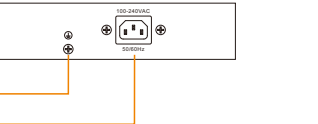

• LED Indicator


LED Indicators	Status	Description
PWR Indicator	Off	the device is power off or failed.
	On	the device power on is normal.
SYS Indicator	Off	The system is being started or abnormal.
	Blinking	The system is working normally.
Link Indicator	Blinking	Indicates that the Switch is actively sending or receiving data over that port
	Green light on	Indicates the link through that port is successfully established and operate at 10Gbps
	Orange light on	Indicates the link through that port is successfully established and operate at 1Gbps or 2.5Gbps
	Off	No device is connected to the corresponding port.

• Button



Button	Description
Reset	Hold for >5 sec. to restore factory default

3. Installation

• Desktop Installation

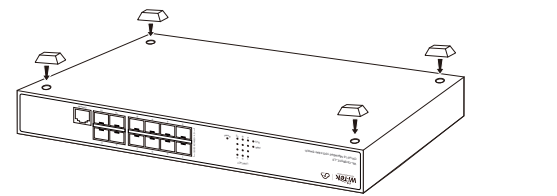


• Rack-mount Installation

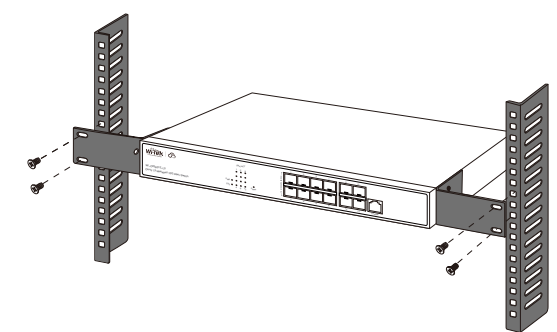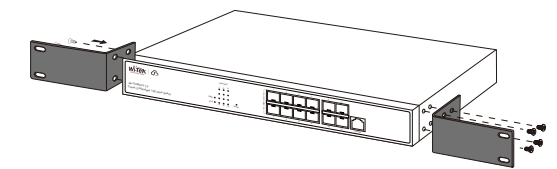

4. Configuration

First, please power on the fiber switch and make sure it is connected to the Internet. Then connect the PoE switch to the fiber switch and make sure PC is conneted to the LAN of PoE switch.

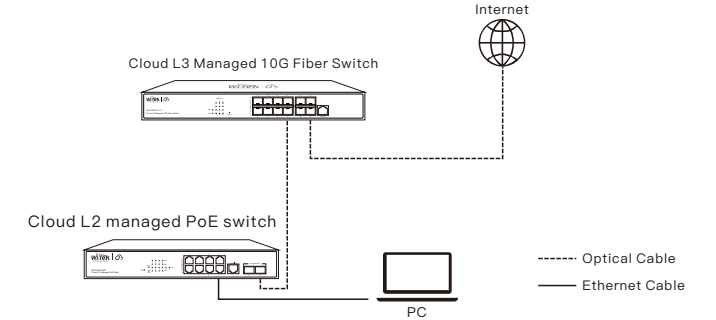

• Log in to the switch locally

Let the switch obtain an IP address and then check the DHCP server to see which IP address was assigned. The switch is set to DHCP by default, so it will try to automatically obtain an IP address. If that fails, then it will use the default fallback IP address, 192.168.0.1


To log in, follow these steps:

- 1.Launch your web browser. Type the appropriate IP address in the address field.
- 2.The login screen will appear. Enter admin in the Username and Password fields. Login in



• Use the console cable to access the switch

Connection Diagram:

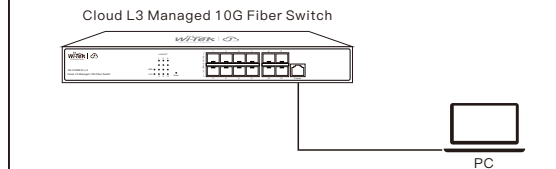


- Step 1 Download a PuTTY software
- Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure

Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).

Notice:


- Step 2 is your computer recognizes the COM number of the Console line
- Step 3 is the baud rate of the exchange (the baud rate of the switch is 9600)

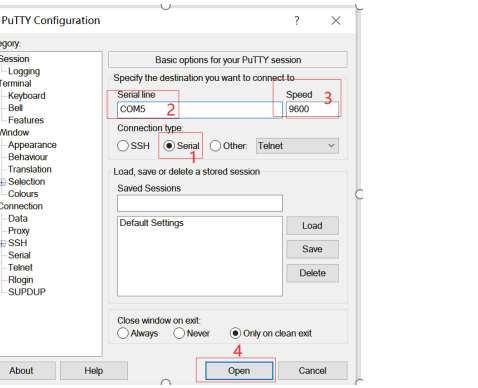


• Cloud login switch configuration

1.Log in to the cloud management interface



(No account, you need to register an account to log in, The URL is: https://cloud2.wireless-tek.com)

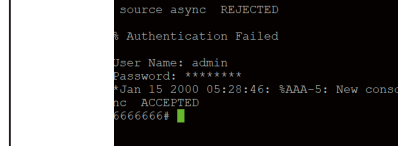

2.Enter the cloud binding switch
(explain:The switch must be connected to the Internet to bind successfully)

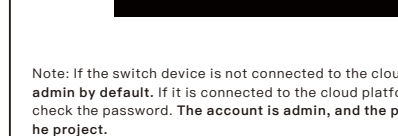


3. After binding, you can use the switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch.
(After entering the switch, you can configure it based on your own needs)

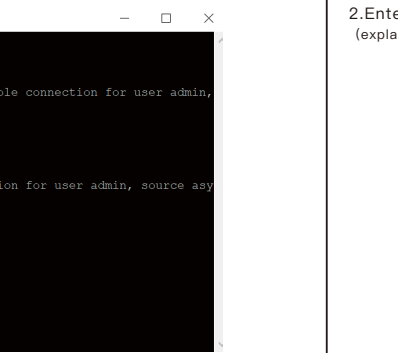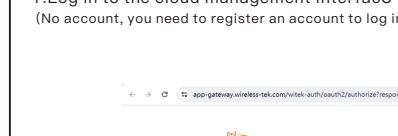

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.





2.Enter the cloud binding switch
(explain:The switch must be connected to the Internet to bind successfully)



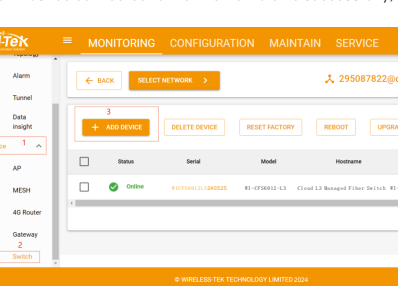


Please enter the device serial number to bind a device to the current group, device can be off when binding.

Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below

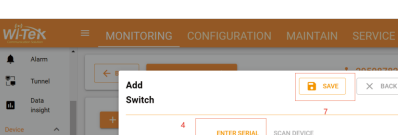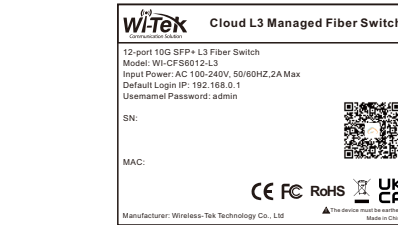


3. After binding, you can use the switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch.
(After entering the switch, you can configure it based on your own needs)

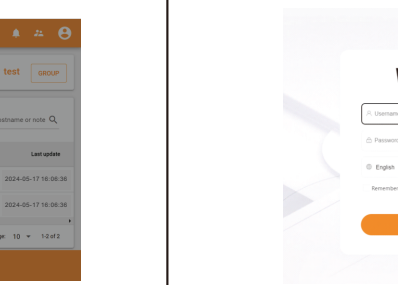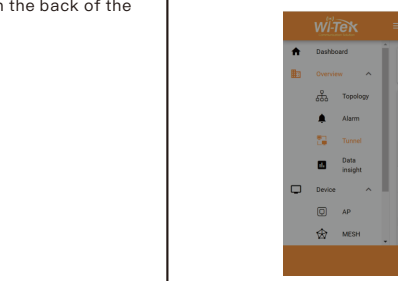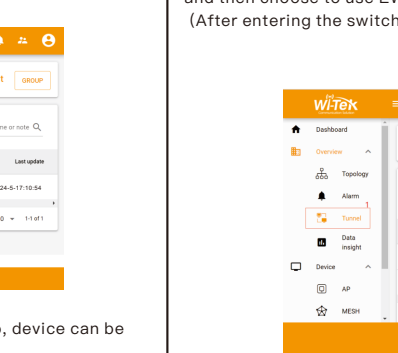

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you with a new product of the same model.
- If the product defects within the three-year warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.

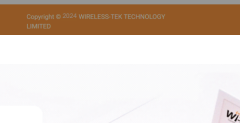

Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
Website:www.wireless-tek.com
Tel:86-0755-32811290
Email:sales@wireless-tek.com
Technical Support:tech@wireless-tek.com

